


Quick reference (“Destination” screen)

The “Destination” screen allows you to search for a destination. To display the “Destination” screen, push the “**DEST**” button.

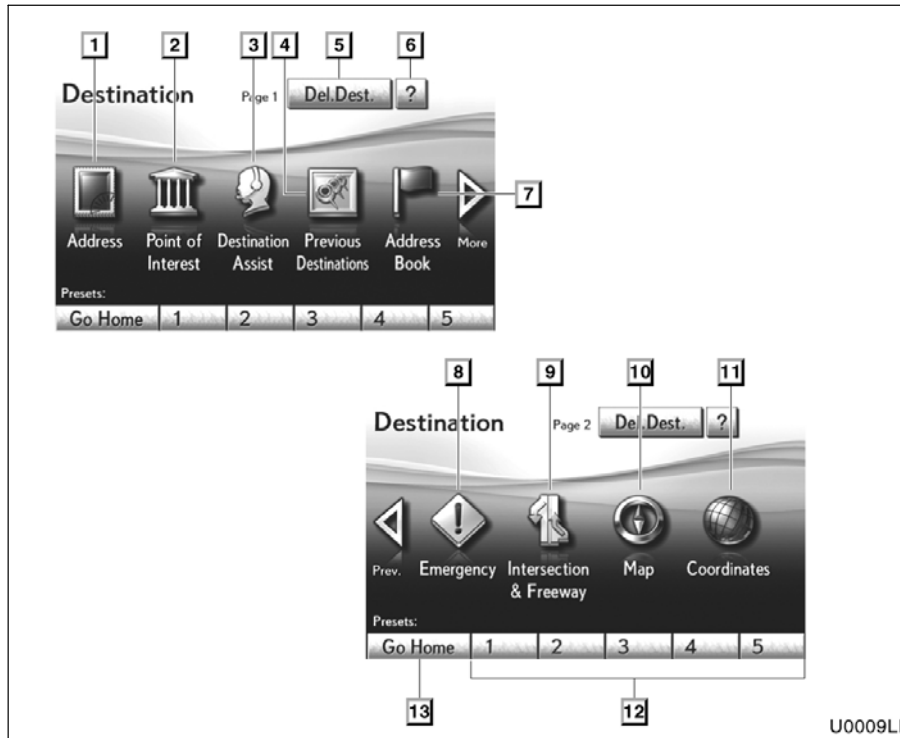

1 “Address”

A house number and the street address can be input by using the input keys. 63

2 “Point of Interest”

Select one of the many Points of Interest that have already been stored in the system’s database. 67

3 “Destination Assist”

Provides you with live assistance finding destinations via the Lexus Enform response center 133

4 “Previous Destinations”

A destination can be selected from any of the last 100 previously set destinations and from the previous starting point. 74

5 “Del. Dest.”

Set destinations can be deleted. 80

6 “?”

Function help for the “Destination” screen can be viewed on this screen. 31

7 “Address Book”

The desired location can be selected from a registered entry in the “Address book”. (To register address book entries, see “(a) Registering address book entries” on page 115.) 75

8 “Emergency”

One of the four categories of emergency service points that are already stored in the system’s database can be selected. 75

9 “Intersection & Freeway”

The names of two intersecting streets or a freeway (interstate) entrance or exit can be entered. This is helpful if only the general vicinity, not the specific address, is known. 76

10 “Map”

A destination can be selected simply by touching the location on the displayed map. 79

11 “Coordinates”

A destination can be set using latitudes and longitudes as coordinates. 80

12 Preset destination buttons


One of 5 preset destination points can be selected by touching the screen directly. If a preset destination point has not been registered, a message will be displayed and the setting screen will automatically appear. To use this function, it is necessary to set the “Preset Destination”. (To register a “Preset Destination”, see “(a) Registering preset destinations” on page 112.) 62

13 “Go Home”

A personal home address can be selected without entering the address each time. If “Home” has not been registered, a message will be displayed and the setting screen will automatically appear. To use this function, it is necessary to set a “Home” address. (To register “Home”, see “(a) Registering home” on page 109.) 62

Quick reference (“Setup” screen)

The items shown on the “Setup” screen can be set. To display the “Setup” screen, push the “**SETUP**” button.

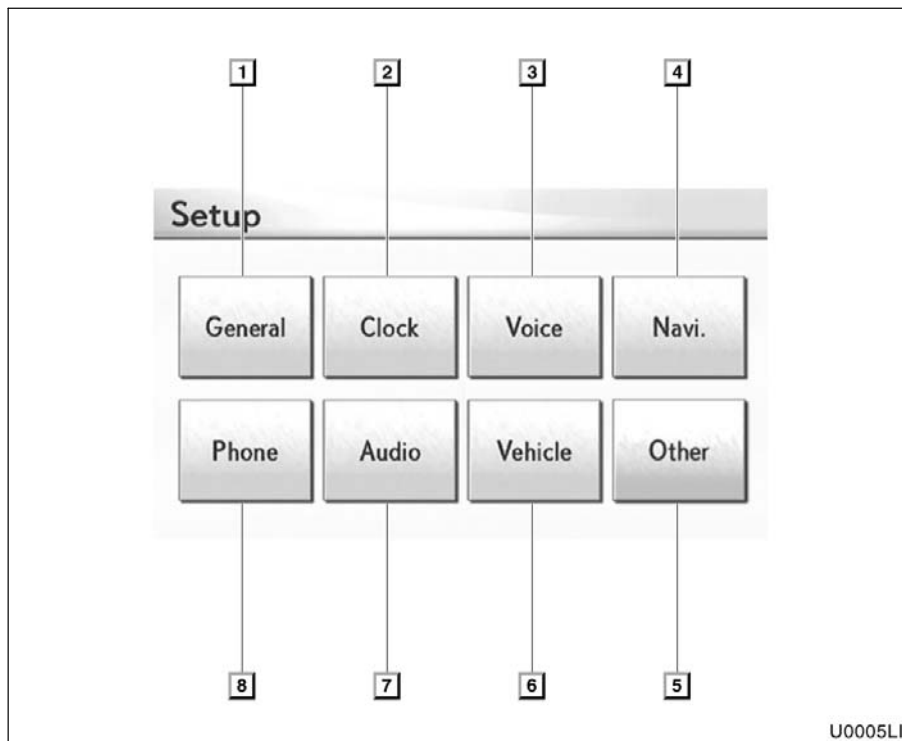

1 “General”

Settings are available for language selection, operation sounds, automatic screen change, etc. 160

2 “Clock”

Used for changing settings for time zones, daylight saving time, etc. 164

3 “Voice”

Voice guidance can be set. 166

4 “Navi.”

Settings are available for average cruising speed, displayed screen contents, POI icon categories, etc. 169

5 “Other”

Settings are available for Lexus Insider, XM® Sports and Stocks. 184

6 “Vehicle”

Settings are available for vehicle information such as maintenance information. 179

7 “Audio”


Settings are available for portable audio devices, Bluetooth® audio devices etc. Owner’s Manual

8 “Phone”

Bluetooth® phones and phone numbers can be registered, and the receiver volume can be adjusted. Owner’s Manual

Quick reference (“Information” screen)

This screen can be used to display the calendar and information on operation of the hands-free phone, etc. To display the “Information” screen, push the “INFO/PHONE” button.

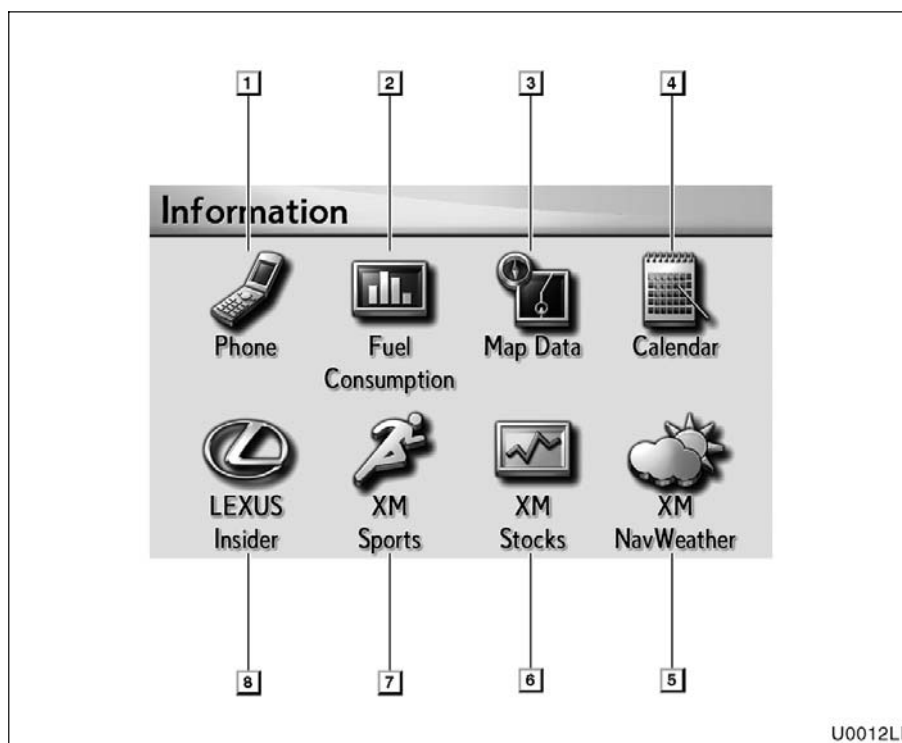

1 “Phone”	5 “XM NavWeather”
To view hands free phone information.	To display the “XM NavWeather” screen.
..... Owner’s Manual 144
2 “Fuel Consumption”	6 “XM Stocks”
Fuel consumption is displayed.	To display the “XM Stocks” screen.
..... Owner’s Manual 139
3 “Map Data”	7 “XM Sports”
Displays information regarding the map data disc version or coverage area.	To display the “XM Sports” screen.
..... 197 139
4 “Calendar”	8 “LEXUS Insider”
To view calendar. 128	To display the “LEXUS Insider” screen.
 151

